
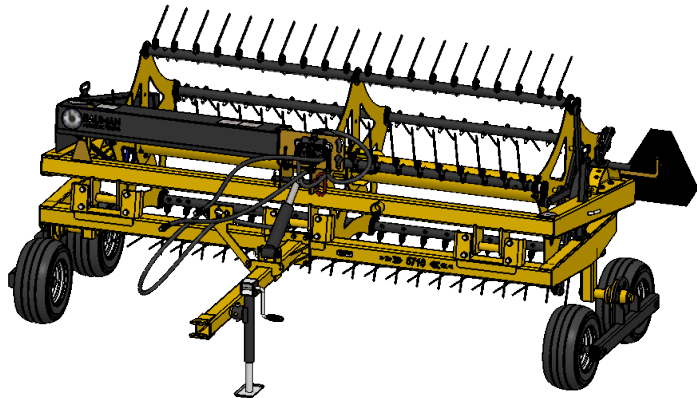


BAUMAN MANUFACTURING

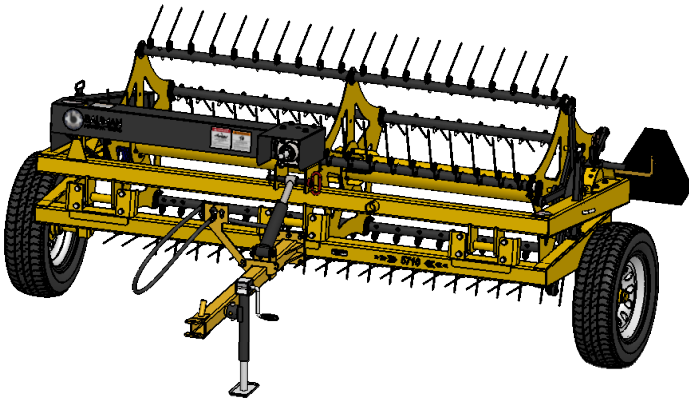


5710/5910 HYDRAULIC LIFT HAY TEDDER

UNPACK/ASSEMBLY INSTRUCTIONS


UNPACKING

FIGURE 1

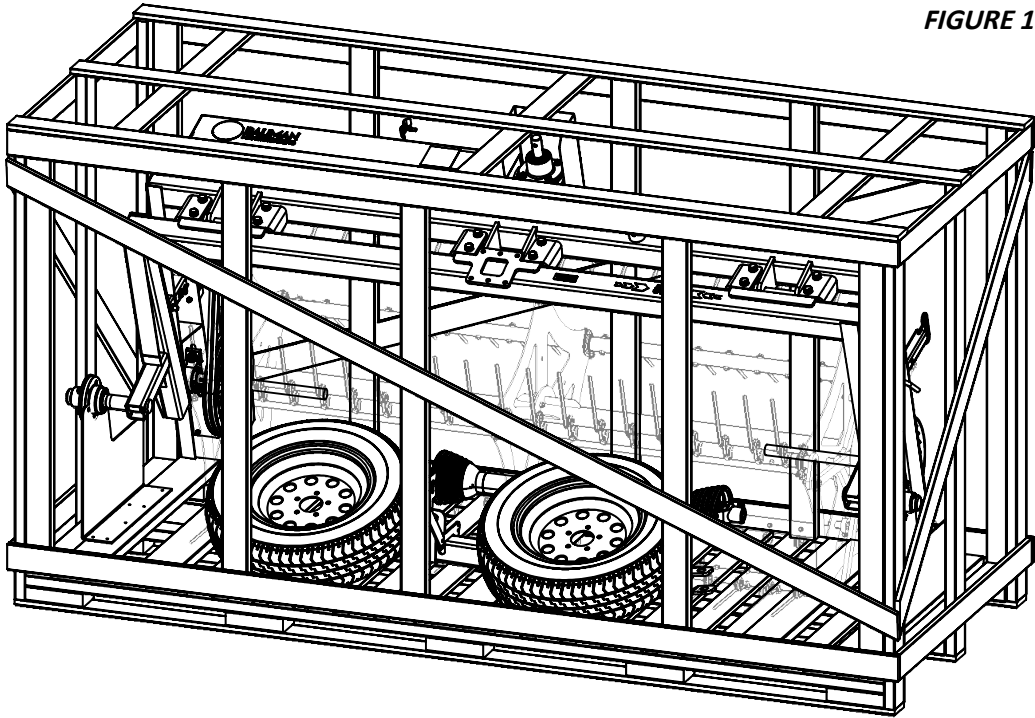


- REMOVE PROTECTIVE PLASTIC WRAP FROM CRATE (FIGURE 1).
- REMOVE CRATE SIDES FOR EASY ACCESS (FIGURE 2).
- MOVE ALL LOOSE ITEMS AWAY FROM CRATE IN A SAFE LOCATION.

FIGURE 2

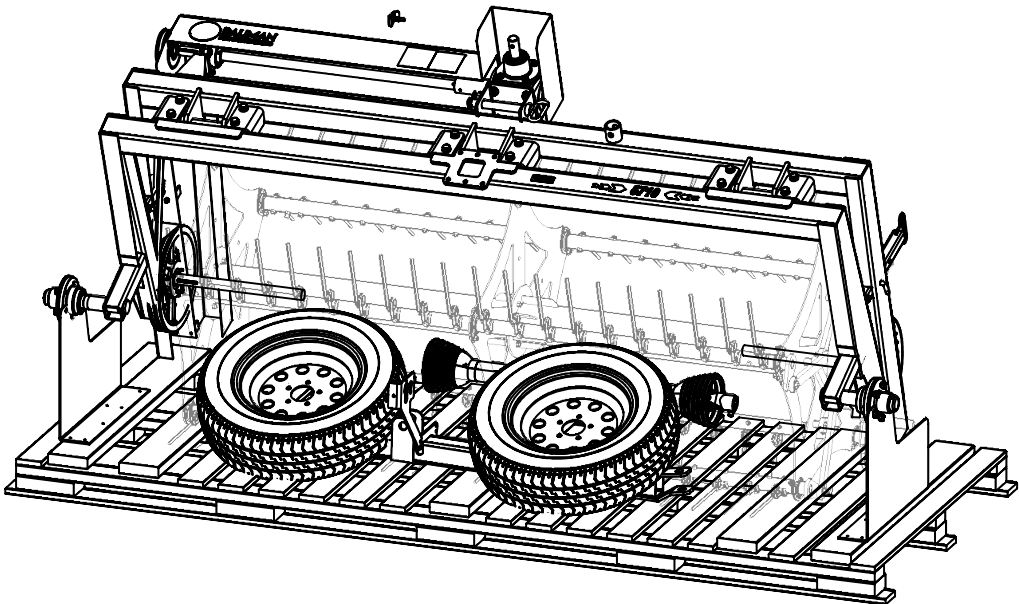


UNPACKING

FIGURE 3

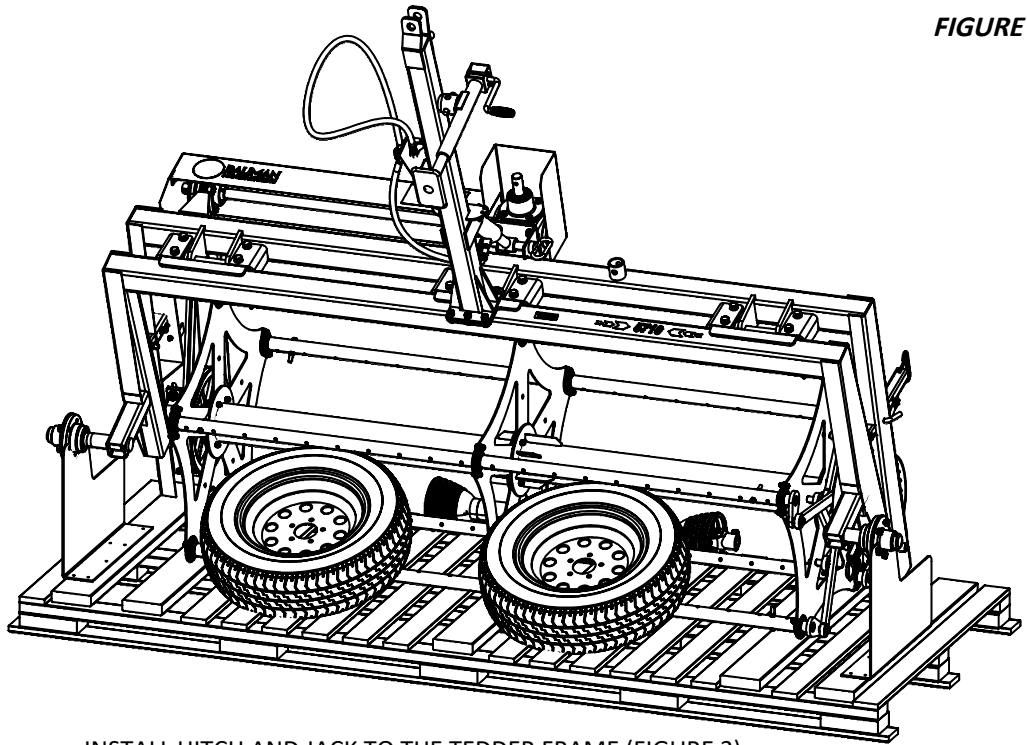


- INSTALL HITCH AND JACK TO THE TEDDER FRAME (FIGURE 3).
- CAREFULLY TILT DOWN
- REMOVE HUB BRACKETS AND INSTALL TIRES OR TANDEM ASSEMBLY (FIGURE 4).
- ROLL OFF CRATE AND COMPLETE SMV SIGN AND TINE INSTALLATION.


FIGURE 4

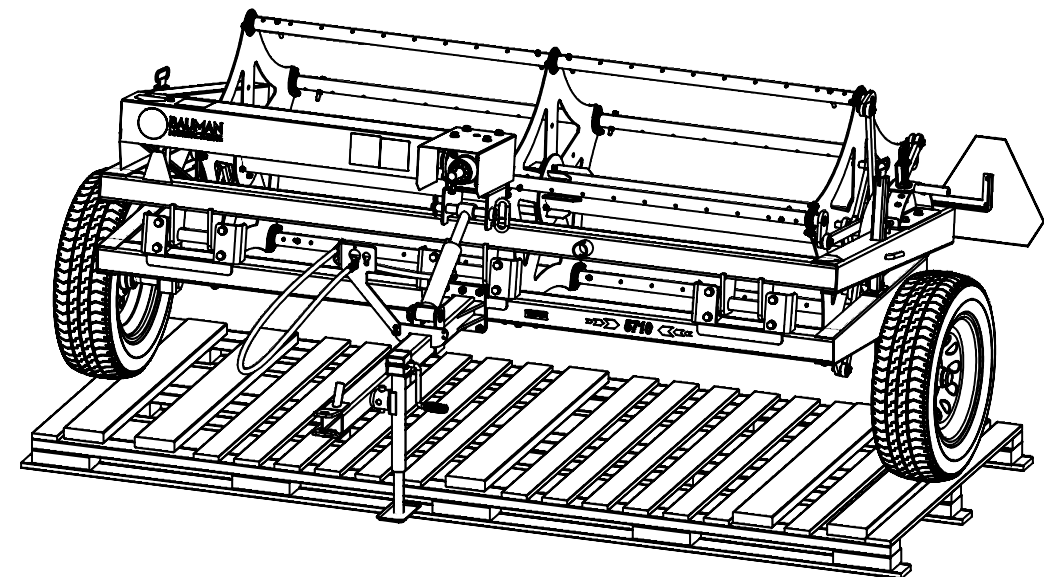


HYDRAULIC CYLINDER & HITCH INSTALLATION

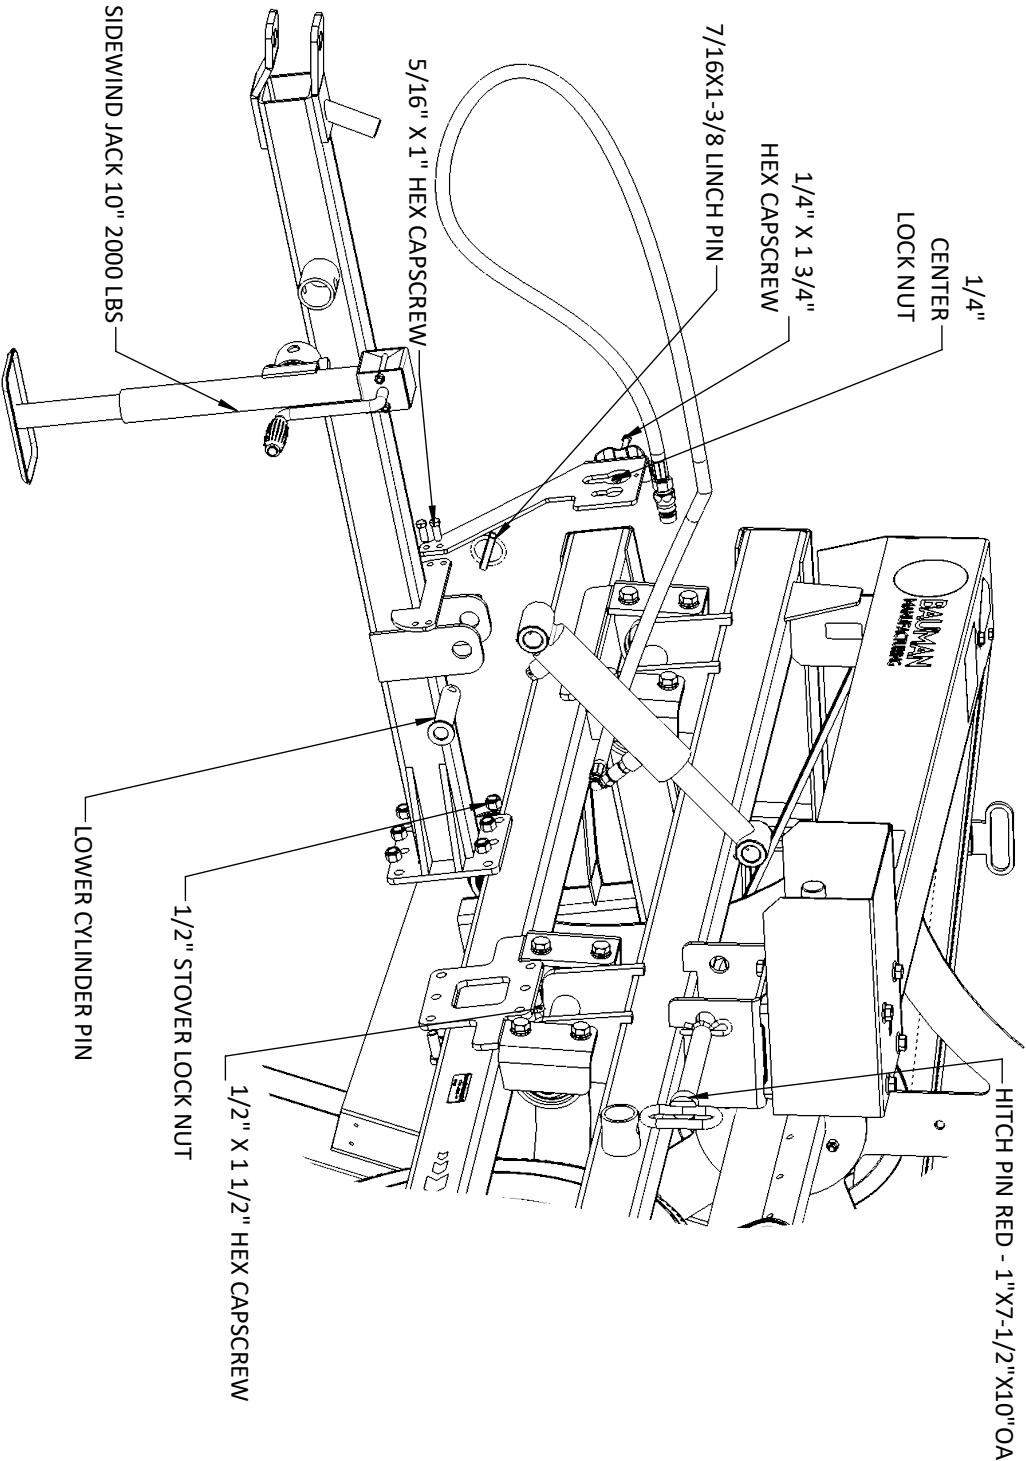

SMV SIGN INSTALLATION

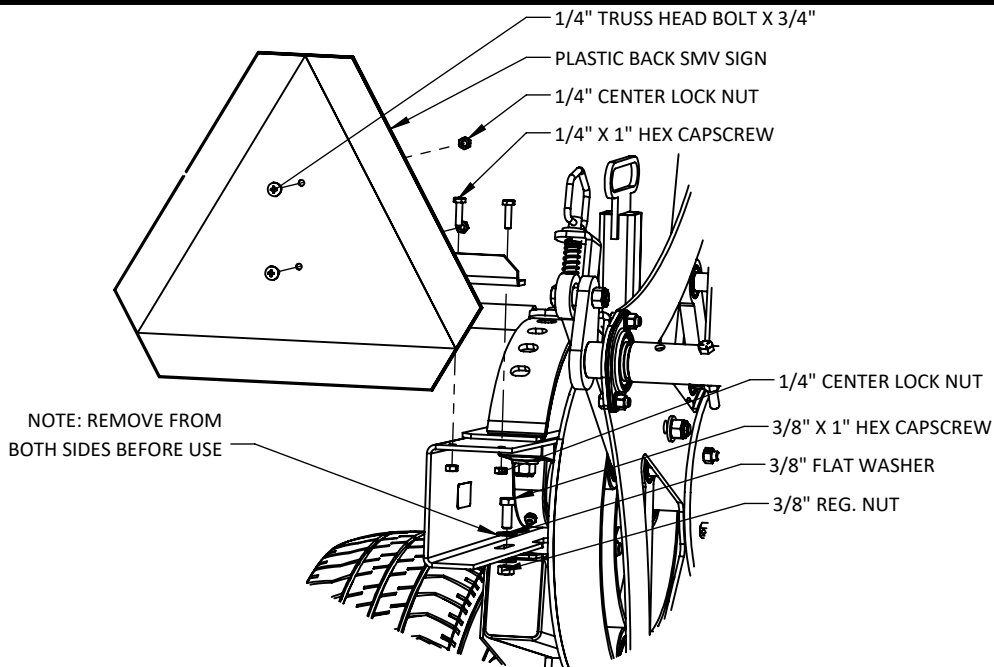

TINE INSTALLATION

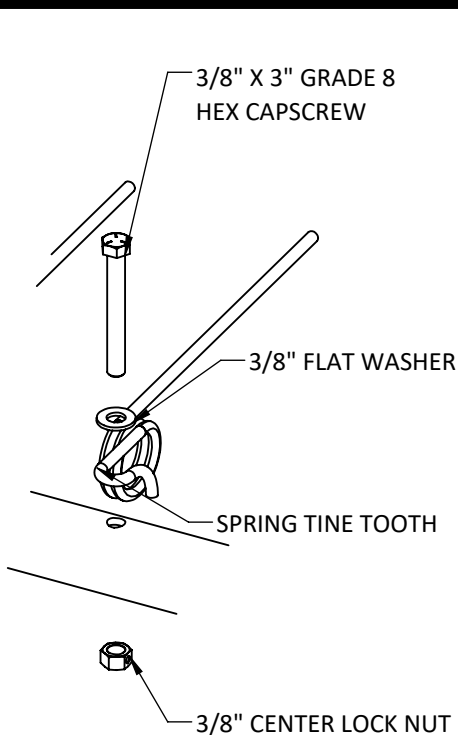

TANDEM INSTALLATION

